

SUPPLY CONNECTION TO THE COMPRESSOR – 018

Compressor connection with a check valve and car valve tip – single circuit system.

The check valve prevents air from returning to the compressor (e.g. a sudden increase in pressure if a wheel falls into a road hole) and thus protects it from damage.

The use of a car valve provides several variants of pumping:

- a) pumping by a compressor (without interfering with its construction and maintaining the warranty)
- b) pumping at a petrol station
- c) pumping by a car pump.

